

## Factors affecting spray drift of pesticides

By **Robert N. Klein**, Extension Cropping Systems Specialist; **Larry Schulze**, Extension Pesticide Education Specialist; and **Clyde L. Ogg**, Extension Pesticide Educator, University of Nebraska–Lincoln Extension

**A** Spray drift of pesticides away from the target is an important and costly problem facing both commercial and private applicators. Drift causes many problems including: (i) damage to susceptible off-target sites; (ii) a lower rate than intended, which can reduce the effectiveness of the pesticide and waste pesticide and money; and (iii) environmental contamination, such as water pollution and illegal pesticide residues. Drift occurs by two methods: vapor drift and particle drift. This article focuses mainly on conditions that cause particle drift and methods to reduce the drift potential of spraying pesticides.

### Drift dynamics

A solution sprayed through a nozzle divides into droplets that are spherical or nearly spherical in shape. A recognized measure for indicating the size of these droplets is micron size. Droplets smaller than 100 microns, about the diameter of the human hair, are considered highly driftable and are so small that they cannot be readily seen unless in high concentrations, such as fog. By comparison, a dime is about 1,270 microns thick. As a result of the small size, drift depends more on the irregular movement of turbulent air than on gravity.

Particle drift is the actual movement of spray particles away from the target area. Many factors affect this type of drift, but the most important is the initial size of the droplet. Small droplets fall through the air slowly and are carried farther by air movement. Table 1 shows the effect of droplet size on the rate of fall. The longer the droplet is airborne, the greater the potential for drift.

► **Table 1. Effect of droplet size on drift potential (Ross and Lembi, 1985).**

Diameter microns	Time to fall 10 ft in still air
1 (fog)	28 hours
10 (fog)	17 minutes
100 (mist)	11 seconds
200 (fine spray)	4 seconds
400 (coarse spray)	2 seconds
1,000 (coarse spray)	1 second

## Self-Study Course

Earn 1 CEU in **Integrated Pest Management** by reading this article and completing the quiz at the end. CCAs may earn 20 CEUs per two-year cycle as board-approved self-study articles. Fill out the attached questionnaire and mail it with a \$20 check (or provide credit card information) to the American Society of Agronomy. Or, you can complete the quiz online at [www.certifiedcropadviser.org](http://www.certifiedcropadviser.org) (\$15 charge).


When leaving the nozzle, the solution may have a velocity of 60 ft per second (41 mi per hour) or more. Unless the spray particles are electrostatically charged, there are two forces acting upon the emerging droplets. These forces—gravity and air resistance—greatly influence the speed and movement of spray droplets.

Droplet speed is reduced by air resistance, which breaks up the droplets. After their initial speed slows, the droplets continue to fall under the gravitational pull. With lower boom heights, the initial speed may be great enough that the droplet reaches the target before drift occurs. Large droplets maintain a downward velocity longer than smaller ones. Small droplets also evaporate quickly, leaving minute quantities of the pesticide in the air (Fig. 1). Larger droplets are more likely to be deposited on the intended target.

Ideally, most of the volume should be contained in larger droplets. When pressure is increased, a higher percentage of droplets are small. With a greater proportion of the total spray volume in smaller droplets, the potential drift onto off-target sites increases.

### Altering droplet size

Many components of a sprayer can be adjusted to alter droplet size. Of these, nozzle type selection is one of the most critical (Table 2). ►

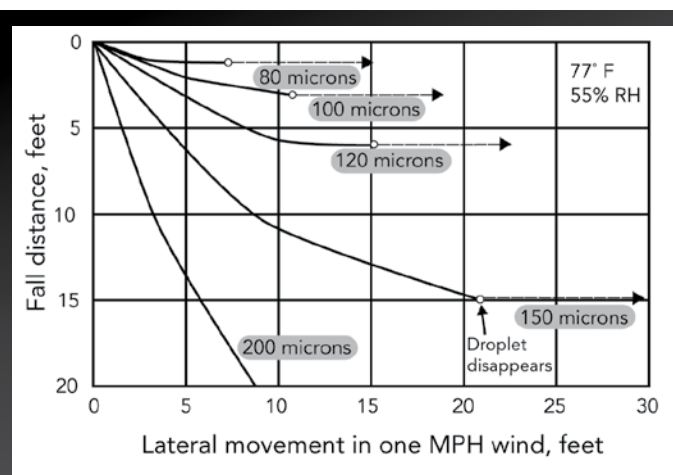

► **Fig. 1. Lateral movement of water droplets (Hofman et al., 1986).** MPH = miles per hour and RH = relative humidity.

► **Table 2. Effect of nozzle type on droplet size at 40 pounds per square inch (psi) and 0.5 gallons per minute (gpm) (Spraying Systems Co., 2007).**

Nozzle type	Volume median diameter†
	microns
Hollow cone	330
Drift guard	440
Turbo TeeJet	500

† Volume median diameter is a term used to describe the droplet size produced from a nozzle tip. It is the droplet size at which one-half the spray volume consists of large droplets and one-half consists of smaller droplets. Since it takes many more small droplets to make up one-half the spray volume, there always will be more small droplets present in a typical spray pattern.

**Nozzle type.** Spray droplets are produced from nozzles in different ways.

■ A *flat-fan nozzle* forces the liquid under pressure through an elliptical orifice, and the liquid spreads out into a thin sheet that breaks up into different-sized droplets.

■ A *flood nozzle* deflects a liquid stream off a plate that causes droplets to form.

■ A *whirl-chamber nozzle* swirls the liquid out of an orifice with a circular motion and aids the droplet formation with a spinning force.

Droplet sizes are influenced by various nozzle types and spray pressures. The Turbo TeeJet cone produces the largest droplets of the three, which results in lower drift potential. For many herbicide applications, a large droplet gives good results, but for good plant coverage (i.e., postemergence application), large droplets may not give good pest control.

Remember, nozzles produce a wide range of droplet sizes. A nozzle that can produce only one size droplet is not presently available. Therefore, the goal in the proper application of pesticides is to achieve a uniform spray distribution while retaining the spray droplets within the intended target area.

**Spray pressure.** Spray pressure influences the formation of the droplets. The spray solution emerges from the nozzle in a thin sheet, and droplets form at the edge of the sheet. Higher pressures cause the sheet to be thinner, and the sheet breaks up into smaller droplets.

Large-orifice nozzles with higher carrier volumes produce larger drops. Small droplets are carried farther downwind than larger drops formed at lower pressures (Fig. 1).

The relationship between flow rate (gallons per minute, or gpm) and pressure (pounds per square inch, or psi) is not linear. For example, to double the flow rate would require the pressure to be increased by four times. This action would greatly contribute to the drift potential and is not an acceptable method to increase carrier volumes. If the carrier volume needs to be changed, select a different nozzle tip that meets the spraying requirements. For proper selection, see

► **Table 3. Effect of spray angle and pressure on droplet size (Spraying Systems Co., 1990).**

Nozzle spray angle	Nozzle pressure		
	15 psi†	40 psi	60 psi
degrees	— volume mean diameter, microns —		
40	900	810	780
65	600	550	530
80	540	470	450
110	410	380	360

† psi, pounds per square inch.

NebGuide G955 from the University of Nebraska–Lincoln Extension at [www.ianrpubs.unl.edu/sendlt/g955.pdf](http://www.ianrpubs.unl.edu/sendlt/g955.pdf).

Table 3 shows the mean droplet size for nozzles when spraying at three pressures. Higher pressures decrease the droplet size.

**Nozzle spray angle.** Nozzles that have wider spray angles produce a thinner sheet of spray solution and smaller droplets at the same pressure (Table 3). However, wide-angle nozzles can be placed closer to the target, and the benefits of lower nozzle placement outweigh the disadvantage of slightly smaller droplets. Lower pressures can be used to reduce the amount of fine droplets. For lower pressures with flat-fan nozzles, low-pressure or extended-range nozzles must be used.

**Spray volume.** The size or capacity of the nozzle also influences droplet size. The larger orifice increases the droplet size at a common pressure. It increases the number of refills, but the added carrier improves coverage and in some cases increases pesticide effectiveness. Table 4 shows the influence of an increasing flow rate on droplet size at a constant pressure. With some pesticides, such as glyphosate, the carrier must be kept low.

## Other drift factors

**Boom height.** Operating the boom as close to the sprayed surface as possible—staying within the manufacturer's recommendation—is a good way to reduce drift. A wider spray angle allows the boom to be placed closer to the target (Table 5). Booms that bounce cause uneven coverage and drift. Wheel-carried booms stabilize boom height, which reduces the drift hazard, provides more uniform coverage, and permits lower boom height. Shielded booms reduce the drift from excessive air movement from travel speed and wind.

**Nozzle spacing.** Nozzle spacing for a given spray volume requires an increase in orifice size as the spacing increases. This typically means increasing the boom height to get the proper overlap. However, enlarging the droplet size is more important than increasing boom height. As a general guideline, do not exceed a 30-inch nozzle spacing because the

► **Table 4. Effect of flow rate on droplet size at 40 pounds per square inch (psi) (Spraying Systems Co., 2007).**

Nozzle type	Flow rate		
	0.3 gpm†	0.4 gpm	0.5 gpm
– volume mean diameter, microns –			
Extended range			
Flat fan	270	300	330
Drift guard	400	425	450
Turbo TeeJet	450	480	510

† gpm, gallons per minute.

spray pattern uniformity begins to degrade. A configuration of nozzle spacing, height and direction, which gives 100% overlap, is preferred.

**Wind speed.** The amount of pesticide lost from the target area and the distance it moves both increase as wind velocity increases (Table 6). However, severe drift injury can occur with low wind velocities, especially under temperature inversion situations. Most recommendations are to stop spraying if wind speeds exceed 10 mi per hour. Wind influences can be minimized by using shielded booms and lower boom height.

► **Table 5. Suggested minimum spray heights. (University of Nebraska–Lincoln, 2003).**

Spray angle	Nozzle spacing			
	20 inches		30 inches	
	Percent overlap			
	30%	100%	30%	100%
degrees	spray height, inches			
65	22–24	NR†	NR	NR
73	20–22	NR	29–31	NR
80	17–19	26–28	26–28	NR
110	10–12	15–17	14–18	25–27

† NR, not recommended if height is above 30 in.

**Wind direction.** Pesticides should not be applied when the wind is blowing toward a nearby susceptible crop or a crop in a vulnerable stage of growth. Select a time when there is little wind or the wind blows gently away from susceptible crops. If these conditions do not exist, consider another method of control or time of application.

**Air stability.** Air movement largely determines the distribution of spray droplets. Wind generally is recognized ►

# SunScan Canopy Analysis System

# AT

**The SunScan System measures Leaf Area Index (LAI) rapidly and accurately under any cloud conditions.**

SunScan is particularly well suited to low regular canopies (such as many agricultural crops). Users don't have to wait for special weather conditions, such as bright sunshine or an overcast sky.

SunScan features the unique BF3 Sunshine Sensor, which provides above-canopy reference measurements of direct and diffuse light.



**Delta-T Devices Ltd, Cambridge, UK**  
[www.delta-t.co.uk](http://www.delta-t.co.uk) [sales@delta-t.co.uk](mailto:sales@delta-t.co.uk)

*In the USA Delta-T is represented by Dynamax Inc.*  
 Call toll free 1-800-896-7108 [www.dynamax.com](http://www.dynamax.com)

► **Table 6. Effect of wind speed on drift in a 10-ft fall (Ross and Lembi, 1985).**

Droplet diameter microns	Wind speed	
	1 mph†	5 mph
100 (mist)	15.4	77
400 (coarse spray)	3.0	15

† mph, miles per hour.

as an important factor, but vertical air movement often is overlooked.

Temperature inversion occurs when cool air near the soil surface is trapped under a layer of warmer air. A strong inversion potential occurs when ground air is 2 to 5°F cooler than the air above. Under inversion conditions, little vertical mixing of air occurs, even with a breeze. Spray drift can be severe. Small spray droplets may fall slowly or be suspended and move several miles to susceptible areas, carried by a gentle breeze.

Avoid applying pesticides near susceptible crops during temperature inversion conditions. Inversions can be identified by observing smoke from a smoke bomb or a fire. Smoke

moving horizontally close to the ground would indicate a temperature inversion.

**Relative humidity and temperature.** Low relative humidity and/or high-temperature conditions cause faster evaporation of spray droplets and a higher potential for drift. During evaporation, the droplets become smaller.

The quantity of spray that evaporates is related to the quantity of the spray deposit. Evaporation is greater from the same deposit in small droplets than in larger drops because the small droplets have greater surface area relative to their volume. Less pesticide gets to the target (Fig. 1).

Evaporation increases the drift potential, so spray during lower temperature and higher-humidity conditions. Pesticides differ in their evaporation rate. Use formulations and adjuvants that reduce evaporation.

As a rule of thumb, if the relative humidity is above 70%, the conditions are ideal for spraying. A relative humidity below 50% is critical enough to warrant special attention.

**Spray thickeners.** Some spray adjuvants act as spray thickeners when added to a spray tank. These materials increase the number of larger droplets and decrease the number of fine droplets. They tend to give water-based sprays a "stringy" quality and reduce drift potential. Droplets formed from an oil carrier tend to drift farther than those formed from a water carrier. Oil droplets are usually smaller, lighter, and remain airborne for longer periods, but don't evaporate quickly.

## New ECH<sub>2</sub>O-TE sensor measures water content, electrical conductivity, and temperature—all in one.

### Features

- Get 3 readings per Em50 port.
- The higher frequency reduces texture and electrical conductivity effects.
- Digital measurement of soil moisture provides high accuracy readings.
- Serial communication.
- Fewer cables.


### Applications

- Moisture and salinity monitoring in engineered media or artificial soil.
- Closely monitor fertigation and its results over time.
- Monitor temperature and water use over time.
- Measure temperature, water content and electrical conductivity.

**T**HE new ECH<sub>2</sub>O-TE is designed to measure the water content, electrical conductivity, and temperature of growth media and soil. Log your data with our robust Em50 logger and easy to use DataTrac software.

The ECH<sub>2</sub>O-TE uses an oscillator running at 70MHz to measure the dielectric permittivity of the soil to determine the water content. A thermistor in thermal contact with the probe assesses the average prong temperature. The gold traces on the surface of the sensor form a four-pole array to measure electrical conductivity.

Visit [www.decagon.com/echo](http://www.decagon.com/echo)  
or call now for more information.  
**800-755-2751**

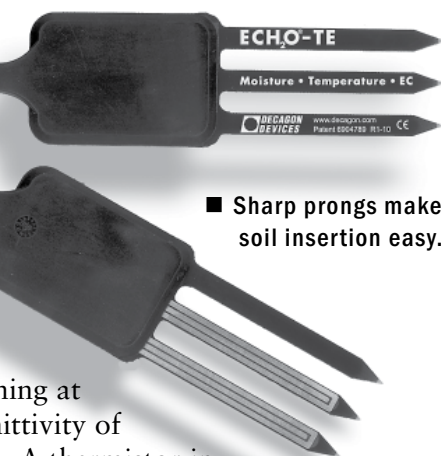

- Sharp prongs make soil insertion easy.



2365 NE Hopkins Court  
Pullman, Washington 99163  
fax 509-332-5158  
[soils@decagon.com](mailto:soils@decagon.com)  
[www.decagon.com](http://www.decagon.com)  
International 1-509-332-2756



## Best management practices for pesticide drift

All nozzles produce a range of droplet sizes. The small, drift-prone particles cannot be eliminated but can be reduced and kept within reasonable limits. Here are some tips:

1. Select low or nonvolatile pesticides.
2. Read and follow the pesticide label. Instructions on the pesticide label are given to ensure the safe and effective use of pesticides with minimal risk to the environment. Each pesticide is registered for use on specific sites or locations. Surveys indicate approximately 65% of drift complaints involved application procedures in violation of the label. Apply a pesticide only if economic thresholds warrant an application.
3. Use spray additives within label guidelines. This will increase the droplet sizes and pesticide effectiveness.
4. Use larger orifice sizes. This will give larger droplets and increase the number of tank refills, but will improve coverage and effectiveness.
5. Avoid high pressure. High pressure creates finer droplets; 45 PSI should be considered maximum for conventional broadcast spraying.
6. Use drift-reduction nozzles. They will produce larger droplets when operated at low pressures.
7. Use wide-angle nozzles, low boom heights, and keep the boom stable.
8. Drift is minimal when wind velocity is under 10 mi per hour. Do not spray when wind is greater or blowing towards sensitive crops, gardens, dwellings, livestock, or water sources.
9. Use shielded booms. When banding, use shroud covers. ■

*This article is being reprinted with permission from the University of Nebraska–Lincoln Extension. The original article, NebGuide G1773: “Spray Drift of Pesticides,” is published online at [www.ianrpubs.unl.edu/sendIt/g1773.pdf](http://www.ianrpubs.unl.edu/sendIt/g1773.pdf). Please note that the Reference section is omitted here because of space constraints but can be viewed at the above website.*